


GARY K. MUNKELT, PE

3. Make the precast structure deeper than required for functional purposes. Once the structure has been installed, concrete can be poured into the base. This method works well where excavation costs are not expensive.

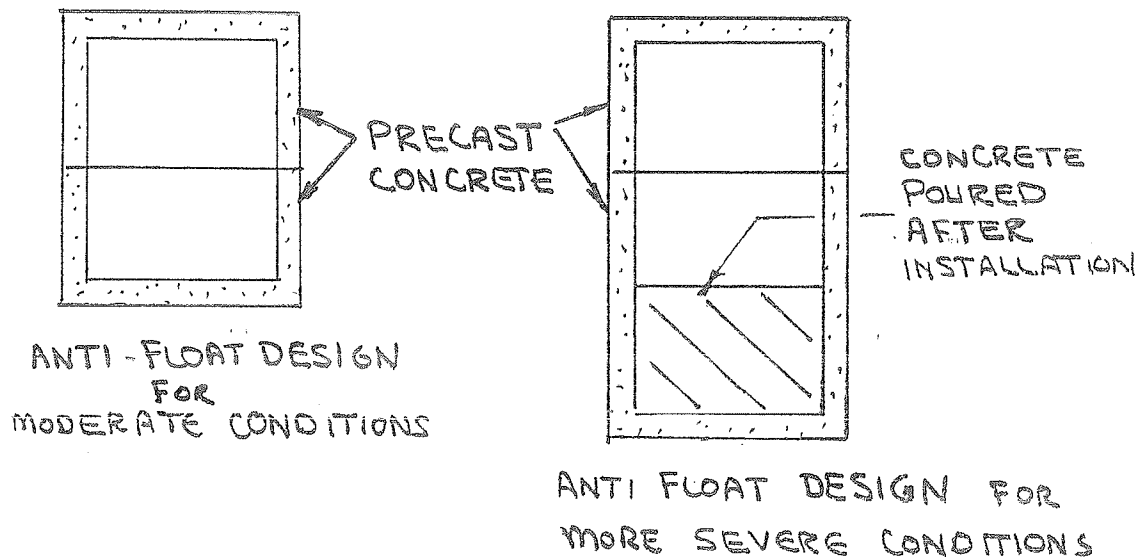

4. Provide anchors on the outside wall of the precast structure and pour concrete in the field after the structure has been installed.

